



# Body Buggy

Instruction Manual



**Read all instructions completely before proceeding.**  
**Please employ standard safety measures including safety glasses and gloves.**

The Body Buggy is very versatile. After installation of the device the vehicle is easily moved from the lift, either single post or twin post. For single post systems, the casters should be located outboard of the mounting brackets and with a twin post system, casters should be located inboard of the mounting brackets.



**Wheels OUTBOARD mounting brackets**

**Wheels INBOARD mounting brackets**

1. Install left and right mounting brackets to cradle, leaving fasteners loose.
2. Slide main beam through brackets with the caster assemblies positioned and sliding lock collars in either the outboard or the inboard position. Center main beam.
3. Secure all fasteners, body mounting brackets and sliding lock collars.
4. Install safety hitch pins in each end either through the caster assemblies for single post or outboard for twin post systems.

The vehicle can be lowered and removed from the lift area via manual effort, freeing the lift for the next project. The Body Buggy is designed to allow two or more persons to move a disabled vehicle within the service area by hand. It is not designed to be mechanically towed or pushed by any vehicle. Remember to position the wheels to intended direction of first movement before lowering, especially for heavier loads.

Due to the versatility of the Body Buggy we do not supply fasteners, however we supply a spacer kit with five varying lengths to be employed to assume the space of the removed cradle. The tech can employ the original fastener, either a nut or cap screw, dependent upon the type of original system.




It is recommended in either case to employ a washer between the bolt or nut and the spacer. Appropriate torque ratings relative to the fastener system should be employed. If not using a spacer be certain to select a fastener of proper length. Spacer sizes: 1", 1.5", 2", 3", & 4"



## Any Questions?

Please contact us at (310) 349-1940 or [info@dentfix.com](mailto:info@dentfix.com)

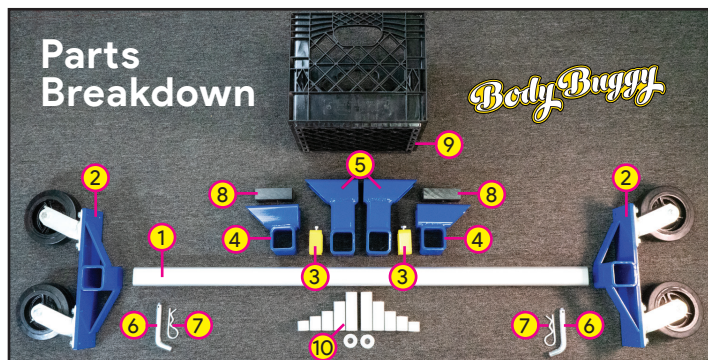

Item #	Description	Quantity
1	Main Beam	1
2	Wheel Assembly	2
3	Sliding Lock Collar	2
4	Mount Bracket	2
5	Mount Bracket 3"	2
6	Hitch Pin	2
7	Hitch Pin Clip	2
8	Fitment Pin Spacer	2
9	13x13 Crate	1
10	Spacer Kit (10 Pieces: 1", 1.5", 2", 3", & 4")	1